


Welcome!

This classroom is equipped with a **Clear Touch Interactive Display** as your second screen. It has the following features:

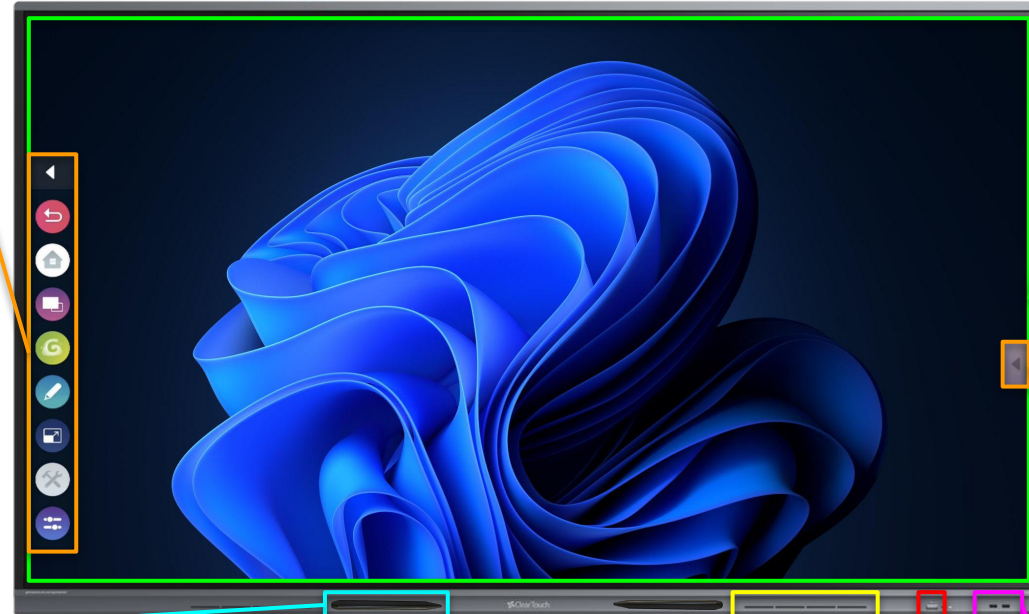

Quick-access Toolbar

- Gives you quick access to useful shortcuts:
 - **Pen Icon** for anytime access to “EasiMark” e-ink tools
 - **Home Icon** returns you to Clear Touch home screen for app selection or general device settings
 - **Dual-Slider Icon** (bottom of toolbar as pictured) allows you to select your input source

e-Pens

- Magnetically mounted to the bottom bezel of the Clear Touch
- Once detached from the bezel an icon for the “EasiMark” ink tools will temporarily appear on the bottom-corner of the screen; press it to access e-ink tools without using the Carrot/Toolbar
- **Note:** When using “EasiMark” tools a finger will be recognized as an e-Pen; Use a full-palm press to activate an “eraser” function

Touch-capable Display

- By default the Clear Touch will mirror the image on the desktop computer (this setting can be changed via Windows Display Settings)
- Quick press with your finger for left-click, long press with your finger for right-click; Whole-palm press will function as an eraser when using e-Ink tools such as EasiMark
- Access “EasiMark” tools by pressing the “carrot” on either side of the screen and selecting the Pen Icon (see: **Toolbar Access “Carrot” & Quick-access Toolbar**)
- **e-Pens** are magnet-mounted along the bottom bezel of the screen

Toolbar Access “Carrot”

- Press this to open the Clear Touch’s quick-access toolbar – it will open on the side of the screen that you tap!
- Press+hold and drag up or down along the edge of the screen to adjust carrot’s location

x2 USB Ports (Type-A)

- Users can connect thumb drives, wireless keyboards & mice, slide advancers, and more via these ports
- When using default “DESKTOP PC” source, these will function as additional USB ports to your teaching station computer

Speakers

Power / Standby Control