

# Exploring your *Clear Touch* Remote Control



**Power / Standby Control**

**Input Select**

- Use this button + arrow and Enter keys to change your input back to "DESKTOP PC" after using the e-Whiteboard / Notes app (see: "Notes" App Shortcut")

**"Touch Lock" Clear Touch Display**

- Enables a "Touch Lock" on the Clear Touch display, preventing accidental swipes or mark-ups on the image

**"A/V Mute" Clear Touch Display**

- "Mutes" (blacks out) the Clear Touch display until pressed a second time
- Does not put the display into standby mode

**"Freeze" Clear Touch Display**

- "Freezes" the image on the Clear Touch, allowing you to work on the Desktop PC itself without changes being visible on the Clear Touch display
- Most useful when needing to work on sensitive material while using a "Duplicated" or "Mirrored" display setting

**"Notes" App Shortcut**

- Takes you to the e-Whiteboard app "Notes"
- Offers robust e-ink, custom background, and save/export options, as well as the ability to import your own images / files via thumb drive
- Return to Desktop PC source via "Input Select" button

**Volume Control Rocker**